

INTERNAL AUDIO ADJUSTMENT PROCEDURE FOR DURAFON 1X, 4X AND PRO

HANDSET SPEAKER OUTPUT ADJUSTMENT FOR DURAFON 1X, 4X, AND PRO.

*Note, first confirm you have already tried setting volume to “6” but still need it louder.

- 1) Press Menu, *, *, # (star, star, pound)
- 2) Press Option 2 for “Boardtest”
- 3) Press 41 and you will be in the “Codec Out” test.
- 4) Note the digit on the bottom right corner. Default is typically between 3 to 5.
- 5) Zero is loudest, 9 is lowest. Adjust accordingly.
- 6) After changing the value press “End” to finish and again to exit.

SECONDARY HANDSET SPEAKER OUTPUT ADJUSTMENT FOR DURAFON 4X AND PRO MODELS ONLY.

- 1) Press Menu, *, *, # (star, star, pound)
- 2) Press option 4 for “Vol Adjust”
- 3) Use the up/down arrows to adjust between -8,-4, 0, +4, and +8.
- 4) +8 is loudest, -8 is lowest, and default is zero.
- 5) Adjust accordingly and then press the top left button to save.
- 6) Now press “End” 3 times to exit.

HANDSET MICROPHONE SENSITIVITY ADJUSTMENT FOR DURAFON 1X, 4X, AND PRO.

- 1) Press Menu, *, *, # (star, star, pound)
- 2) Press Option 2 for “Boardtest”
- 3) Press 51 and you will be in the “Codec In” test.
- 4) Note the digit on the bottom right corner. Default value is typically between 3 to 5.
- 5) Zero is loudest, 9 is lowest. Adjust accordingly.
- 6) After changing the value press “End” to finish and again to exit.